




#### **Basic Information**

#### Including

Radio Body x1, Battery x1, Adaptor x1, Charging Cable x1, Belt Clip x1, Hand Strap x1, User Manual x1

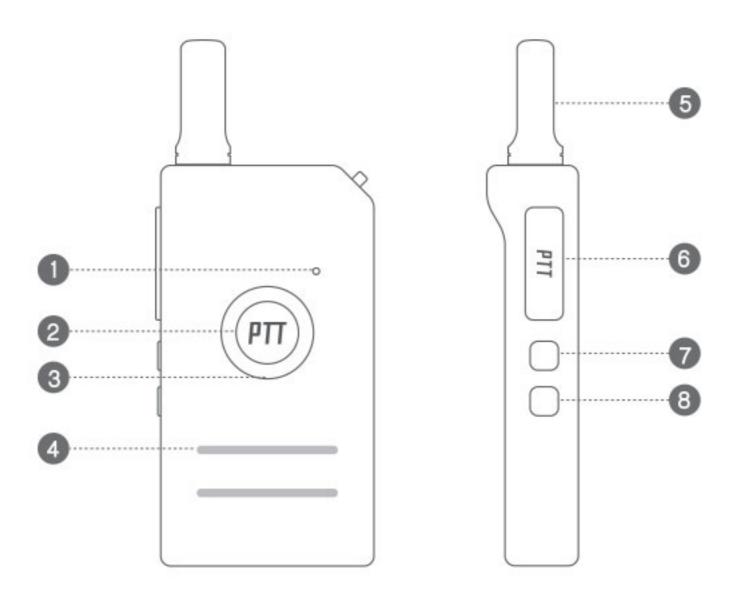

#### **Basic Parameter**


Dimension: 123x52x21.5mm


Weight: 80g

Storage Channel: 16CH

Operating Voltage: 3.3-4.2V DC

Operating Temperature: -20°C~-50°C

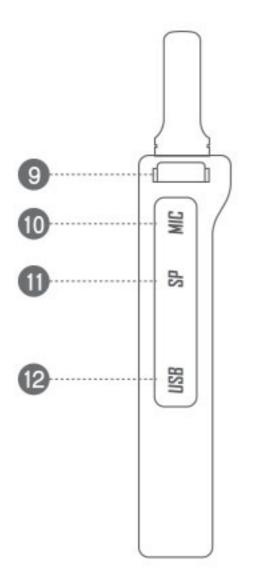

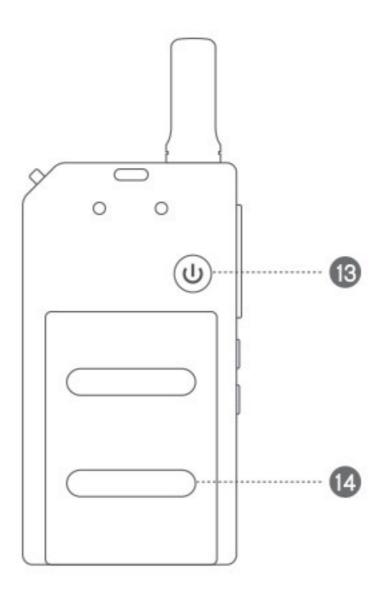

- Microphone
- 2 PTT Key
- 3 Breathing Light
- 4 Speaker
- 6 Antenna
- 6 Side PTT Key
- 7 Channel +

- 8 Channel -
- 9 Volume Key
- MIC Jack
- Earphone Jack
- USB Charging Port
- Power On/Off
- Battery

#### Power On/Off


Long press "Power On/Off" Key for 2 seconds to turn on/off the radio.



#### Channel Selection


Short press "Channel +" to increase the channel number.

Short press "Channel - " to decrease the channel number.

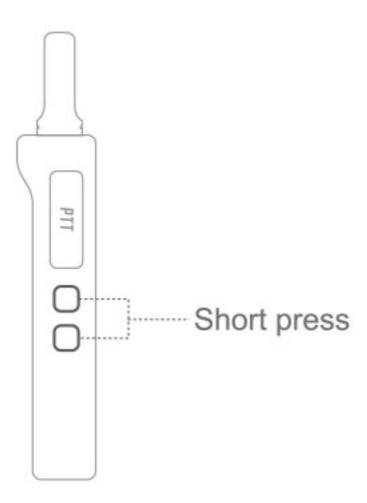


### Push To Talk

Press "PTT Key / Side PTT Key" to transmit, release to exit.

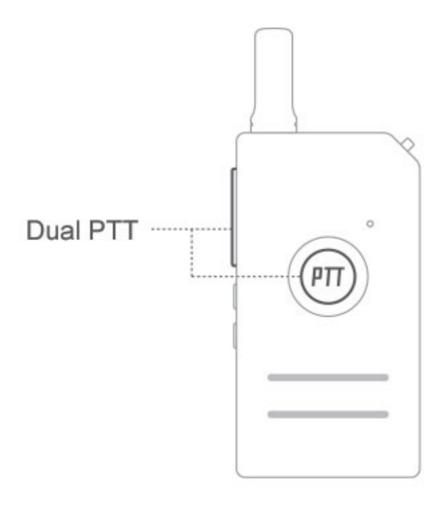


### **Monitor Function**

Press for 2 seconds to monitor the local airwaves.

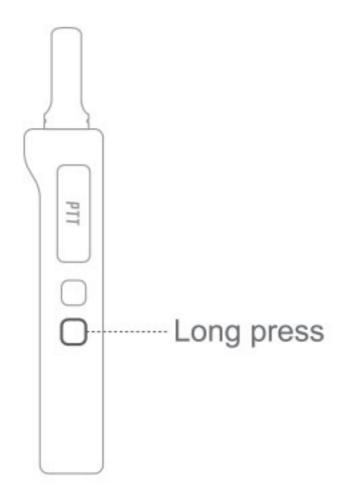


### Current Channel Broadcast

Long press "Channel + " for 1.5S to know the current channel.

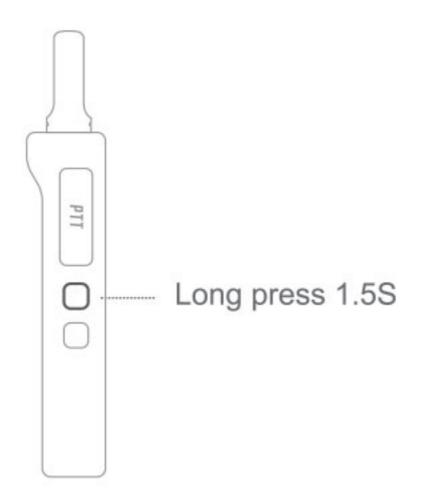

# Volume Adjust

Toggle "Volume +" to increase the volume, toggle "Volume - " to decrease the volume. You will hear a beep sound when the volume is maximum or minumum.

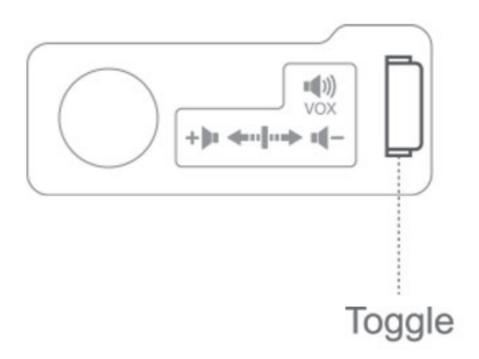

## Breathing Light

After being in Standby mode for a bit, the "breathing" light will activate. Every 5 seconds it glows for a bit.

#### **Scan Function**

Scan function is activate in No. 16 channel, stop to scan after exiting No.16 channel.

# Hassle Free 180 DAY WARRANTY!

For warranty information contact your dealer or email support@kleinelectronics.com



#### **Care and Cleaning**

To guarantee optimal performance as well as a long service life of the product, please follow the tips below.

- Do not puncture or scratch the product with hard objects.
- Do not place the product in corrosive agents, solutions or water.
- Do not handle the radio by its antenna or external microphone directly.
- When not in use, keep the accessory jacks covered with the protective caps.
- Power off the product, and remove the battery before cleaning.
  - Clean up the dust and fine particles on the product parts with a clean and dry lint-free cloth or a brush regularly.
  - Use a non-woven fabric with neutral cleanser to clean the keys, control knobs, and shell after long-time use.
    - Do not use chemical preparations such as stain removers, alcohol, sprays or oil preparations.

